

Sizing Your Air Curtain

WIND STOPPING CAPABILITY BY MODEL (MPH)														
MOUNTING HEIGHT (FEET)	PTW	EVE MP	CED CHS CLD	BCE	BCT	LDC	TDG	CHA	TFD	HDC	EHD	BPA	XPA	
					CHD	LDX	THS			HDX				
					ETD	RBT	TIG	ETA		TSD				
					ECE	ECC								
50													15.0	
40													20.1	
30												10.7	24.8	
29												11.2		
28												11.8		
27												12.5		
26												13.1		
25												13.8		
24												14.6		
23												15.2		
22											13.2	16.0		
21											14.7	16.9		
20											15.2			
19											16.1			
18											16.9			
17										15.0	17.5			
16								10.5		15.8	18.0			
15								11.2		16.6	19.0			
14							11.9	11.9	14.9	17.2	20.0			
13							12.4	12.4	15.7	18.0	20.6			
12		8.8					13.1	13.1	16.6	19.0	21.3			
11		9.5	10.1				13.9	13.9	17.4	19.8				
10		10.2	11.0				14.8	14.8	18.2					
9		10.9	11.9				15.5	15.5						
8		11.5	12.8	14.7			16.4	16.4						
7		12.2	13.7	15.4			17.3	17.3						
6		13.1												
5		13.9												
4		15.0												
3.6	4.9													

Wind speed (mph) stopped at install height (ft.) by model