


Single Folding Gates

Finished Assembly

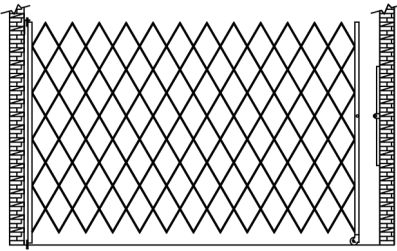

Parts Needed


5/16" x 2" Long Lag Bolt
Masonry Door Frame or Wall Installations
(wall installation may require lead anchor)

Tools Needed

3/4" Masonry Drill Bit 
1/4" Masonry or Wood Drill Bit 



Parts Included

2" Standard L-bracket
Bearing Washer
Locking Bar

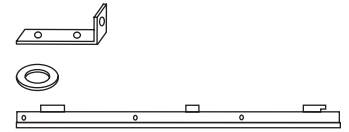


INSTALLATION INSTRUCTIONS


- 1) Before installing, decide on gate placement. L-bracket that forms top hinge allows gate placement in the recess of door frame. Installation can also be made outside or inside of wall next to door or opening frame. (See Figure 1)
- 2) Have a helper extend the gate and stand it upright where it will be mounted. Drill 3/4" diameter x 3" deep hole, 11" from wall into the floor for gate pin to set into. Place a bearing washer over floor hole and set bottom gate pin into floor mount hole. (See Figure 2)

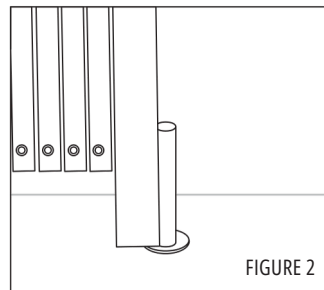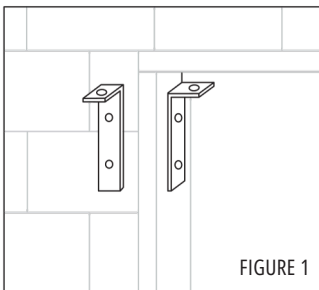

- 4) Extend and retract gate to its stops to work out stiffness, then fully extend gate across opening. Align padlock holes and position the locking bar on door frame or wall. Mark and drill pilot holes. Secure with 5/16" x 2" lag bolts. (See Figure 4)

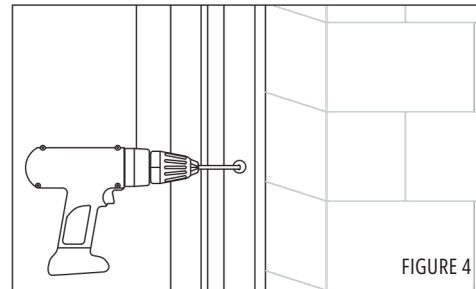


- 5) Only gates 7' and wider include a center drop pin. If included, fully extend gate across opening and mark the floor where center drop pin is located. Drill a 3/4" diameter x 3" deep hole into the concrete floor. Lower center drop pin. (See Figure 5)

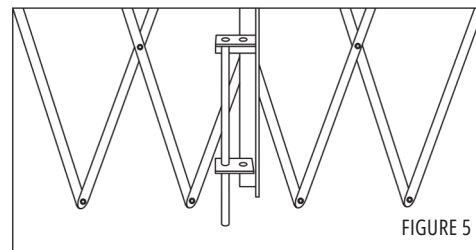

 **CAUTION!** Check to confirm gate will swing away from opening

- 3) Extend gate and hang L-bracket on top of gate to verify where it will be mounted. To release tension you may lift the wheel 1/2"- 3/4" off the floor. Mark and drill pilot holes into door frame or wall. It may be easier to drill pilot holes if you remove the gate from its floor mount. Place bearing washer and bottom gate pin back into floor mount. Slip L-bracket over top of gate and bolt (not included.) (See Figure 3)

- Wood door frames or walls: 5/16 x 2" lag bolts.
- Steel door frames or walls: Drill & tap for 5/16" x 2" lag bolts.
- Brick or concrete frames or walls: 5/16" x 2" Lag bolts set into 3/8" holes with lead anchors.

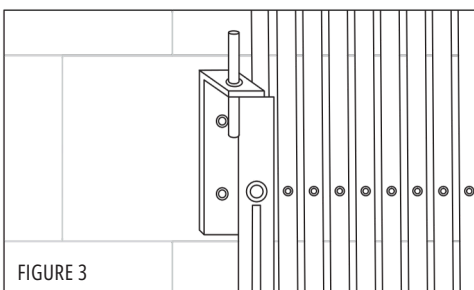

- 6) Gate can be secured to locking bar using padlock. Open gates slowly at first to avoid warping.

 **CAUTION!** Keep fingers out of the web pinch points.

Scan to view video



4710 N Brady Street • DAVENPORT, IA 52806
• Barron Equipment • 800-397-6690 • 563-391-1321 FAX
Email SALES@BARRONEQ.COM